



EZ Pet Barrier


Assembly is easy.....

The EZ Pet Barrier is designed to custom fit your vehicle. Once it is installed at the proper height and securely attached to the head rests, you can adjust the width of the unit by sliding the four sliding arms inward or outward.

When installed correctly, the EZ Pet Barrier will keep your pet safely confined in your vehicle. You will also be able to move the seat forward, backward, recline or slide with the unit still attached to the head rests.

Contents:


- Part A: One (1) Top Frame Section
- Part B: One (1) Bottom Frame Section
- Part C: Four (4) Adjustable Sliding Arms
- Part D: Three (3) Adjustable Elastic Straps with Hooks
- Part E: One (1) Bottom Extension Section
- Part F: Four (4) Zip Ties for Bottom Extension
- Part G: One (1) Top Plastic Shield with Velcro
- Part H: Three (3) Plastic Shields - Bottom and 2 Side Shields (Part C), See *
- Part I: Ten (10) Rubber Sleeves, already attached, See «

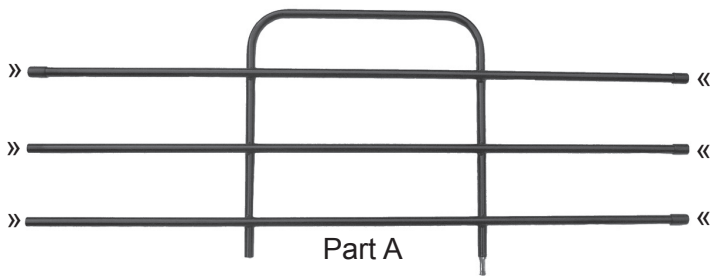

Part A



Part B

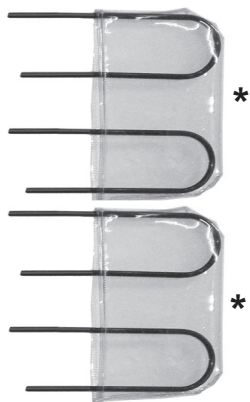

Parts C with Shield Part H



Part D



Part E with Shield Part H

* Plastic Shields are clear.



Parts F




Part G





Part I

Assembly Instructions:

Step 1: Connect Part A and Part B by sliding the two frames together. Make sure the outer tube edges fit flush. This is now the main frame.

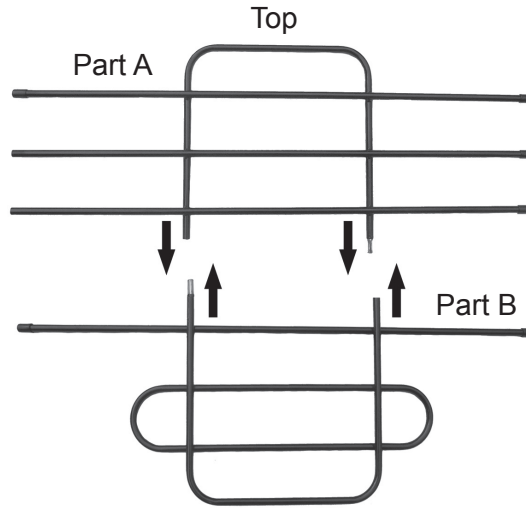


Step 2: Insert the four sliding arms - Part C - into the main frame, through the rubber sleeves already attached to the horizontal bars on both sides of center frame.

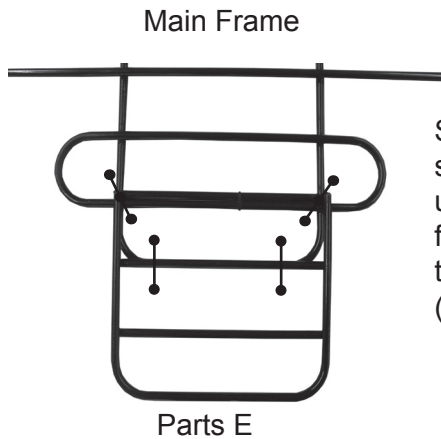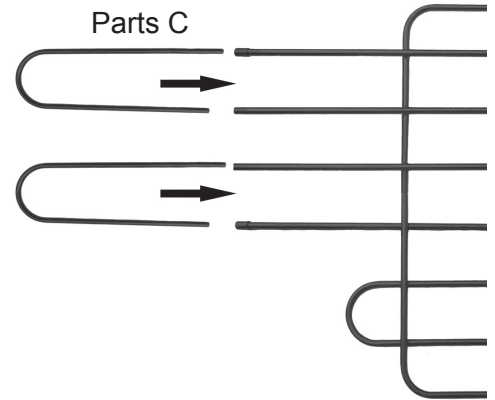

Step 3: Attach Part E to the bottom section of main frame (if needed) using zip ties (Part F) on each side of frame as shown (●—●). Slide Part H, the plastic shield up over the bottom (if needed).

Step 4: Attach the rounded end of the top shield (Part G) to the bottom of the main frame and extend it up the body as far as needed. Attach the velcro straps over the desired horizontal bar and the long strap across the body. This will keep small dogs from slipping through the EZ Pet Barrier. If needed attach side shields to sliding arms (Part H).

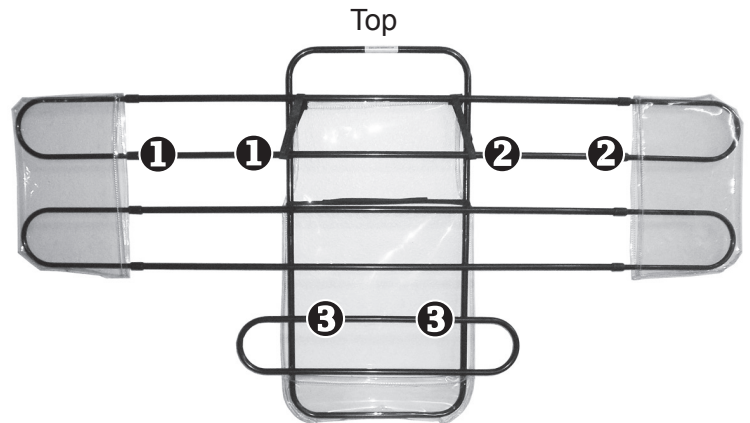

- ① ② Headrest elastic strap post attachments.
- ③ Armrest base or under seat elastic strap attachment.

Step 5: Install the EZ Pet Barrier to the desired height by attaching the elastic strap around the headrest posts to the nearest horizontal bar. To do this raise the headrest 1", attach the straps (Part D) to a horizontal bar and the other end of the strap to the same horizontal bar. Adjust the tension until it holds the unit firmly in place. ① ②

Step 6: The third strap goes around the base of the armrest and attaches to the nearest horizontal bar. If there is no armrest, attach the strap to the underside of the seat. ③ **WARNING: DO NOT ATTACH TO ANY WIRING UNDER THE SEAT.**



The EZ Pet Barrier is ready for you to use!