







# EZ Pet Barrier

Assembly is easy.....

The EZ Pet Barrier is designed to custom fit your vehicle. Once it is installed and securely attached to the head rests, you can adjust the width of the unit by sliding the four sliding arms inward or outward.

When installed correctly, the EZ Pet Barrier will keep your pet safely confined in your vehicle. You will also be able to move the seat forward, backward, recline or slide with the unit still attached to the head rests.


- Part A: One (1) Top Frame Section
- Part B: One (1) Bottom Frame Section
- Part C: Four (4) Adjustable Sliding Arms
- Part D: Three (3) Adjustable Elastic Straps with Hooks
- Part E: Eight (8) Rubber sleeves already attached to the straight tubing pieces

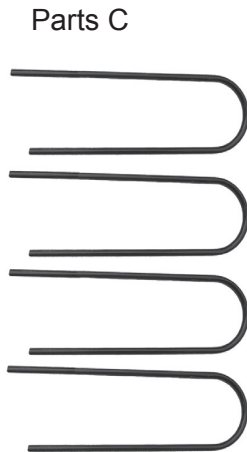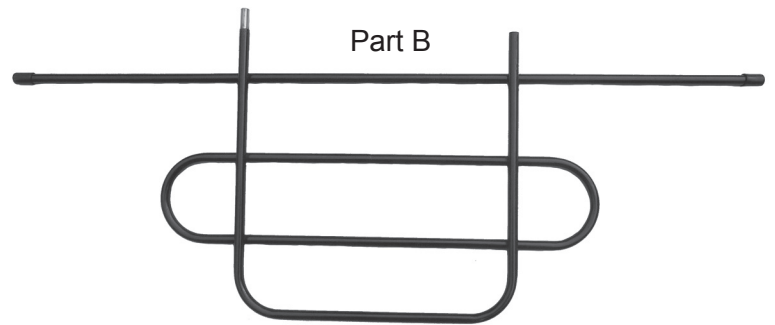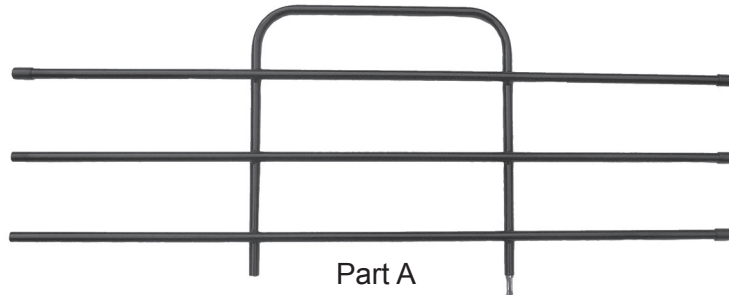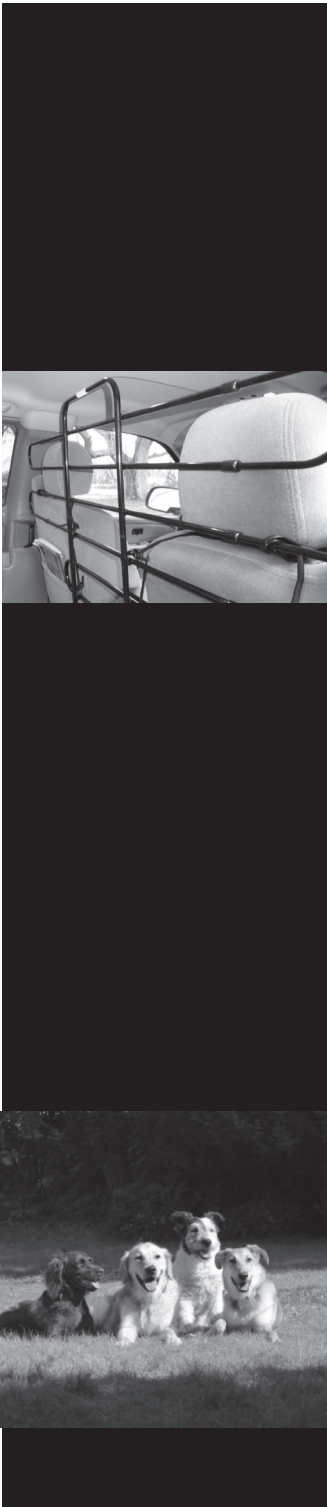




# EZ Pet Barrier


## Assembly Instructions:

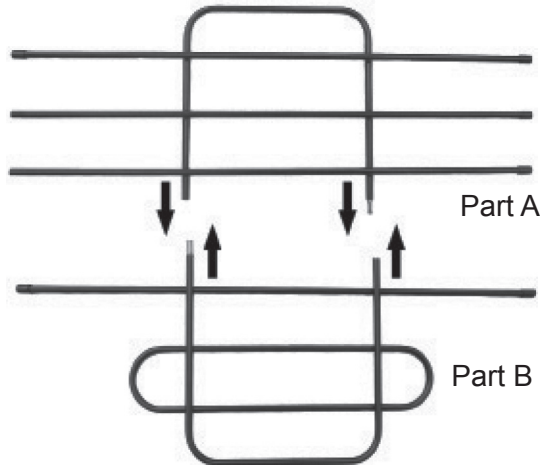


Step 1: Connect Part A and Part B by sliding the two frames together. Make sure the outer tube edges fit flush. This is now the main frame.

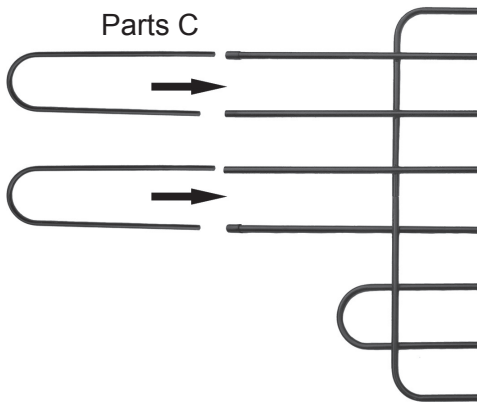

Step 2: Insert the four sliding arms - Part C - into the main frame on each side, through the rubber sleeves already attached to the straight tubing pieces.

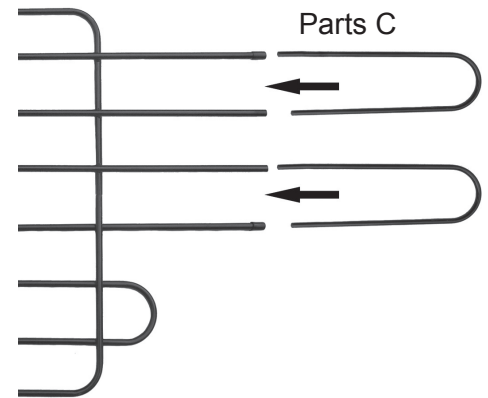

Step 3: Install the EZ Pet Barrier to the desired height by attaching the elastic strap around the headrest posts to the nearest horizontal bar. To do this raise the headrest 1", attach the straps (Part D) to a horizontal bar and the other end of the strap to the same horizontal bar. Adjust the tension until it holds the unit firmly in place. ❶ ❷

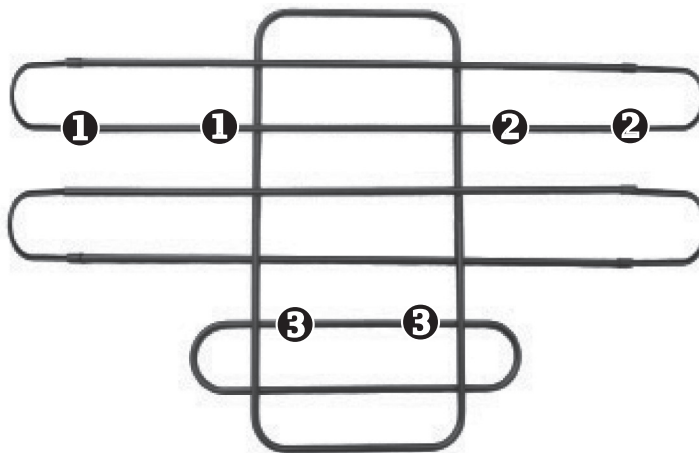

- ❶ ❷ Headrest elastic
- ❸ Strap post attachments. Armrest base or under seat elastic strap attachment.



Step 4: The third strap goes around the base of the armrest and attaches to the nearest horizontal bar. If there is no armrest, attach the strap to the underside of the seat. ❸ **WARNING: DO NOT ATTACH TO ANY WIRING UNDER THE SEAT.**

Attach strap from the door side of the headrest, across the seat and attach to a lower bar in the mid section.

## The EZ Pet Barrier is ready for you to use!